





- For ease of installation, READ through ALL instructions before you begin.
- Pour faciliter l'installation, LISEZ TOUTES les instructions avant de commencer.
- Para facilitar la instalación, LEA TODAS las instrucciones antes de comenzar.

3/8" Inset Self-Closing Hinge / Charnière encastrée de 3/8 po à fermeture automatique / Bisagra de inserción de cierre automático de 3/8"

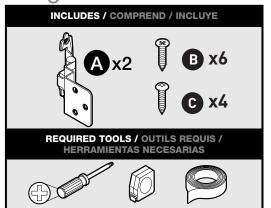


- For face-frame type cabinets ONLY.
- Pour les armoires à cadre en façade EXCLUSIVEMENT.
- SOLAMENTE para gabinetes con marco frontal.

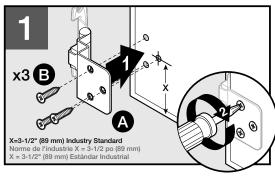

## Attach hinges (A) to door with screws (B).

Fixez les charnières (A) à la porte à l'aide des vis (B). Fije las bisagras (A) a la puerta con los tornillos (B).

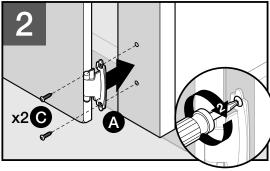

Line up door with face-frame. Secure with screws (C).

Alignez la porte avec le cadre de façade. Fixez à l'aide de vis (C). Alinee la puerta con el marco frontal. Asegúrela con los tornillos (C).